
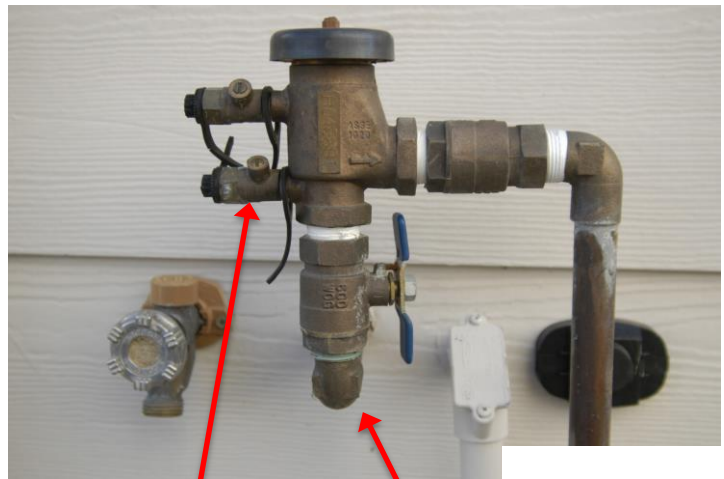


Quick Drain

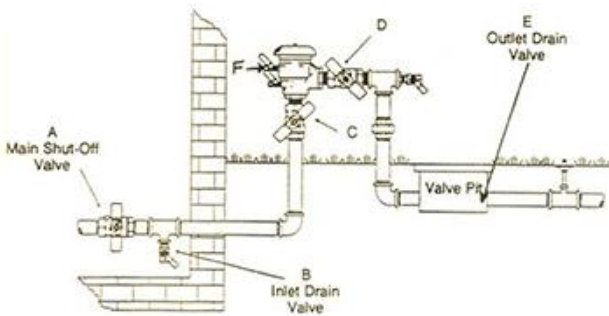

Mini Valves

Cap


1. The first step is to shut off the Main Water Valve (A) inside your house. Usually this in the furnace/maintenance room but can be in a crawl space. Follow the main water line coming into the house and find the sprinkler line that tees off. Turn the valve handle perpendicular to the pipe. *After that check to make sure you have running water in the house. If you do then you turned off the correct valve.*

2. Second, with a flat head screwdriver open the two mini valves (F). **Open Mini Valves**

3. Sometimes there is a **Cap** screwed on the copper elbow. Twist that off to drain as well. Tape the cap to the backflow so you don't lose it.

4. Next, go to your valve box outside and open the Outlet Drain Valve (E) at the end of the manifold. *(Some valve boxes don't have a drain - skip to step 5.)*

5. Lastly, return inside, place a small bucket under the Drain Valve (B) and proceed to open it, draining any remaining water into the bucket. *(Sometimes the drain valve can be a lever, handle or a **Cap** that you unscrew.)*

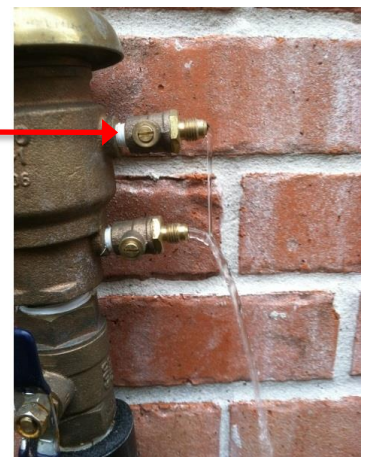

To turn the Sprinkler System back on, reverse the steps.

1. Starting outside, close the Outlet Drain Valve (E) and the two mini valves (F).
2. Proceed inside and close the Inlet Drain Valve (B).
3. Now you can turn on the Main Water Valve.